



# LG G Pad 8.3 Front Facing Camera Replacement

This guide will show you how to replace the front facing camera.

Written By: Mario Salguero



## INTRODUCTION


If your front facing camera is not working properly, it may be time to replace it. This guide will show you how to replace the front facing camera.

## Step 1 — Back Panel



- With the tablet face down, pull out the SD card slot cover.
- Using a Philips #000 screwdriver, remove the 3mm screw in the SD card slot.

## Step 2

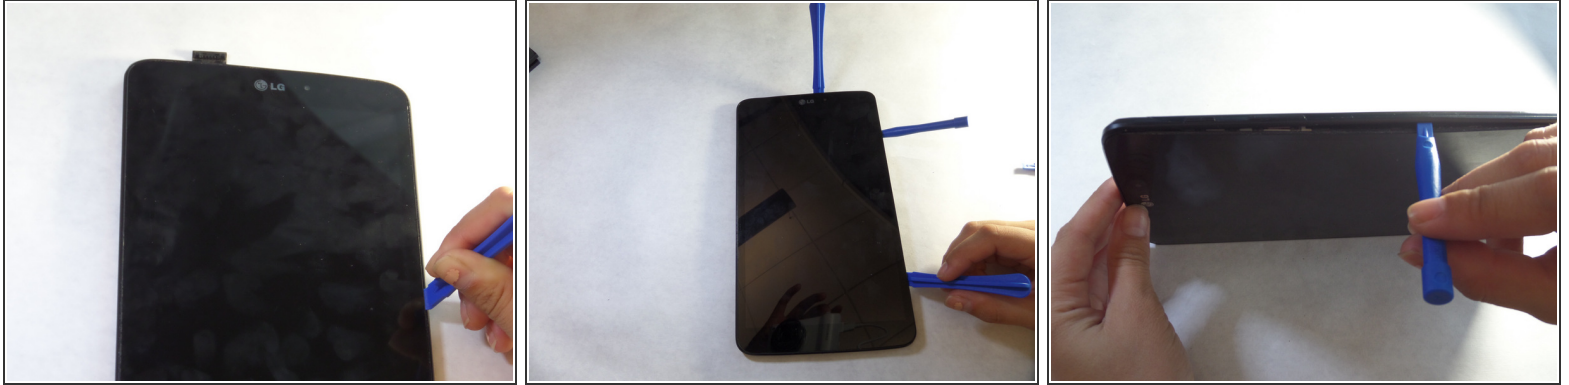



- Insert a plastic opening tool in the small crevasse between the screen and the back.
  - Pry the screen away from the back panel.
  - Repeat this on each edge of the device.
- i** We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.
- i** This requires heavy force. The back of the device is attached with adhesive. If the back panel is too hard to remove, use the [iOpener](#).

## Step 3



- After using the plastic opening tools, pry open the device with your hands, removing the back panel from the screen.

## Step 4 — Speaker

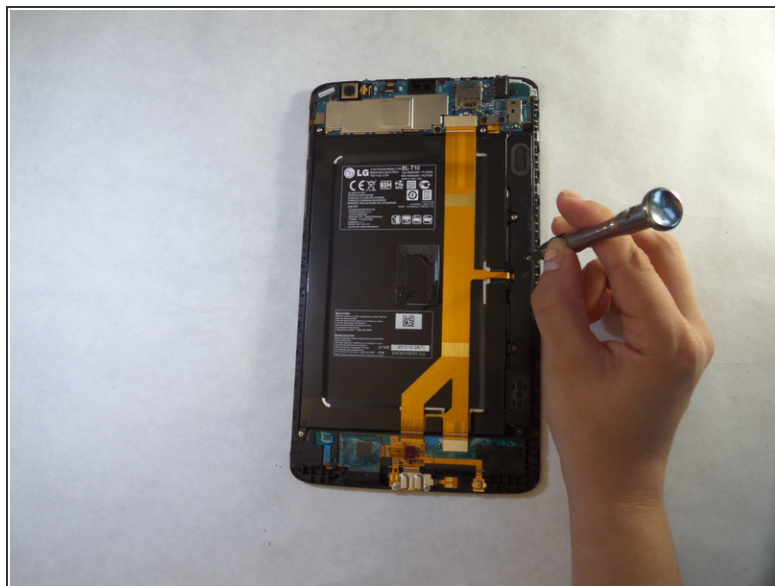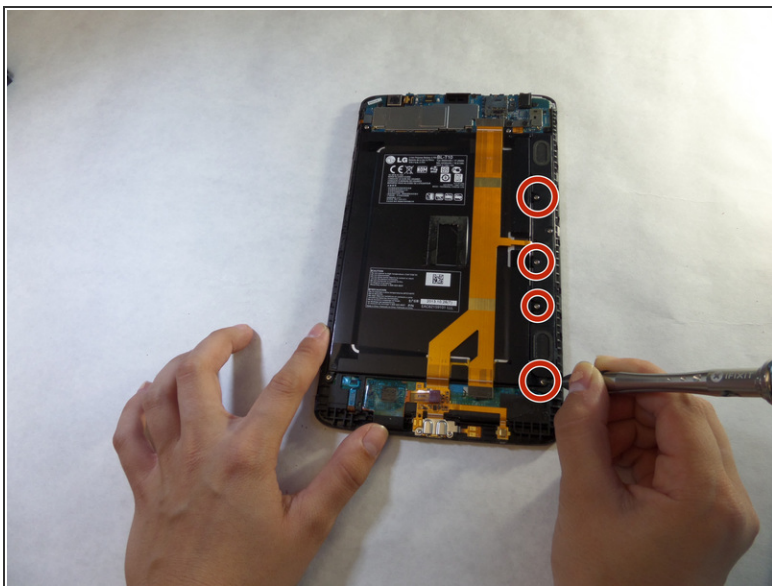

- Remove the four 3 mm Phillips screws that hold down the speaker.
- ☑ These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.





## Step 5




- Use your fingers to remove the speaker.

## Step 6 — Battery

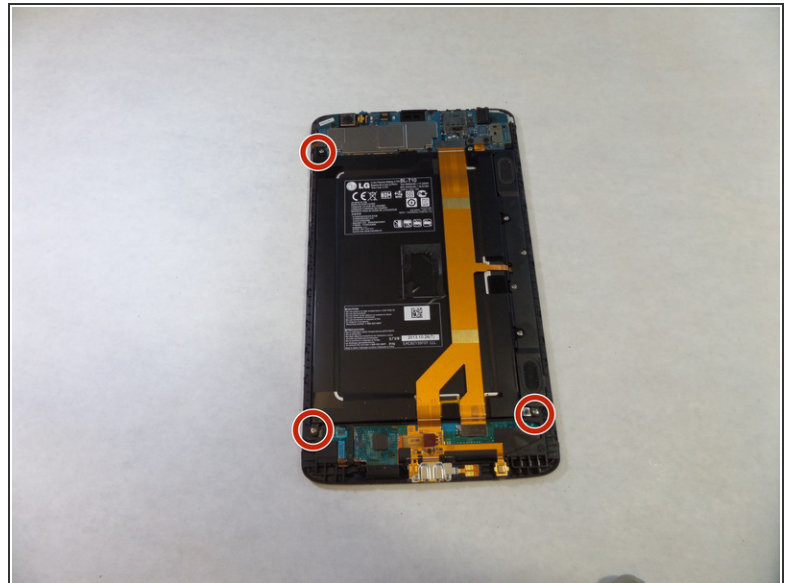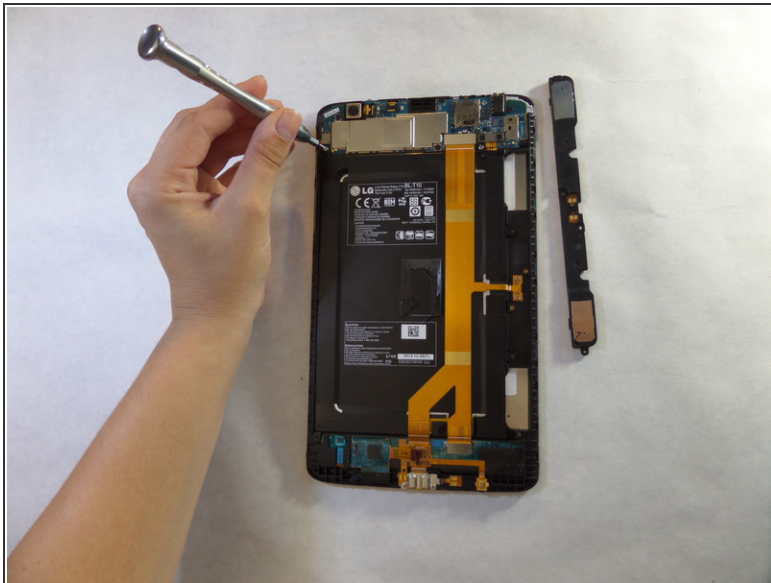


- With a Philips screwdriver #000 unscrew the 3mm screws at the corners of the battery.

## Step 7

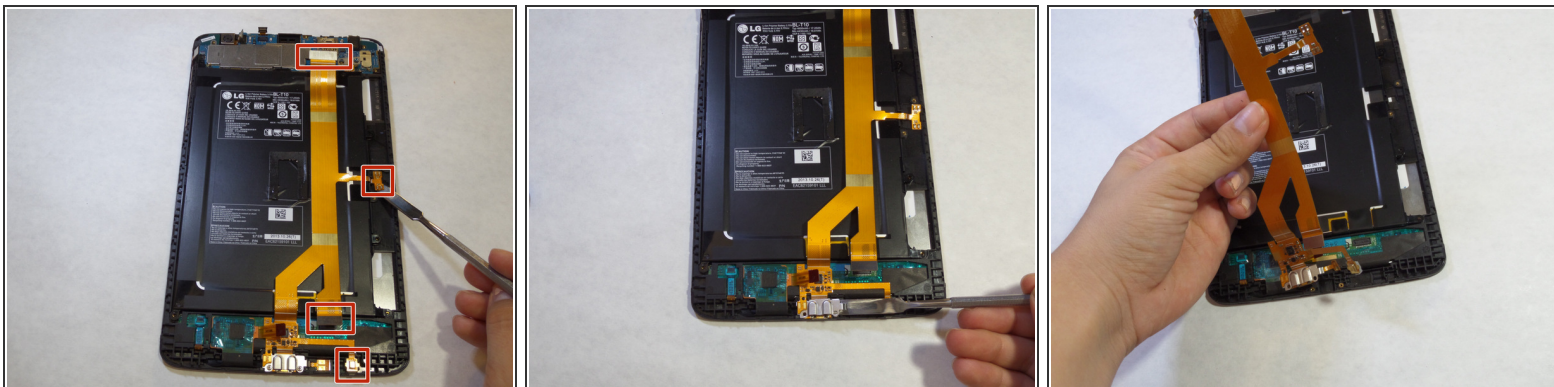

- Using a spudger or plastic opening tool, disconnect the ribbon cable from the right side of the device, where it is attached with adhesive.
- ⚠ These images use a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

## Step 8

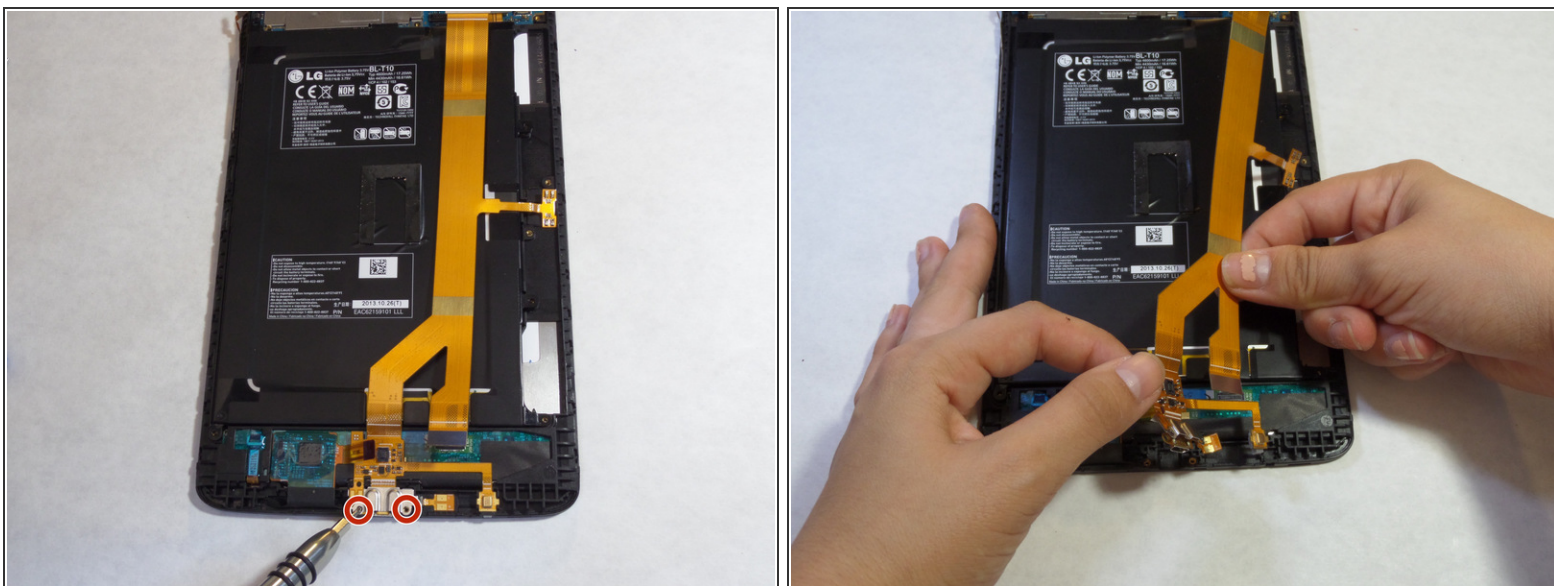

- Use the Philips screwdriver #000 to remove the 3mm screws at the bottom of the tape.
- Remove the yellow tape from the device.



## Step 9



- Unhook the battery from where it is attached at the top of the device.

## Step 10 — Motherboard



- Unhook the small yellow ribbon on top of the motherboard.




## Step 11




- Remove all the 3mm silver screws and the 2mm black screws on the motherboard and carefully lift it out of the device.


## Step 12

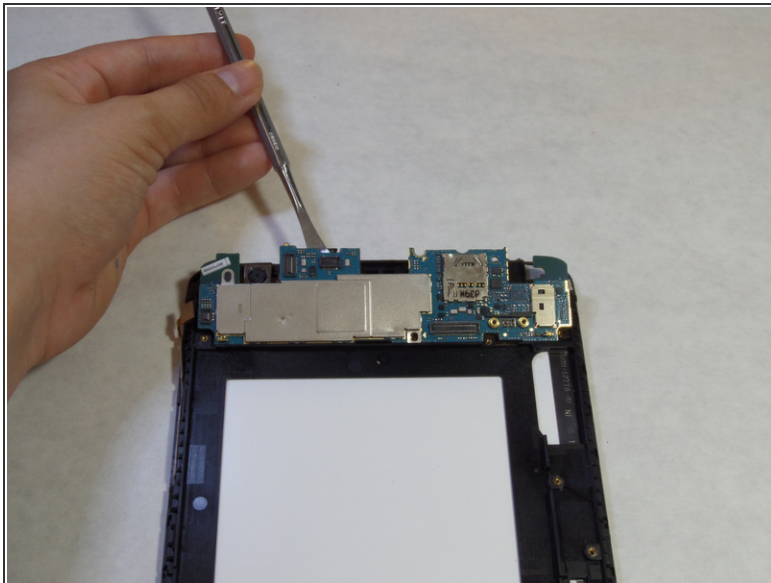


- Use a plastic opening tool to lift the motherboard out of the device.

 These images use a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

## Step 13 — Front Facing Camera

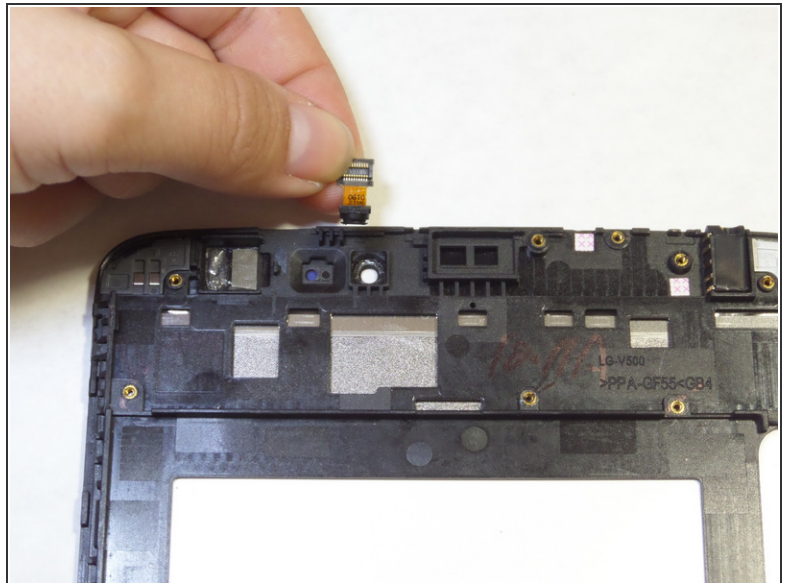

- Use a plastic opening tool to lift the front facing camera out of the device.

 These images use a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 05:52:49 PM.